 


Part no.

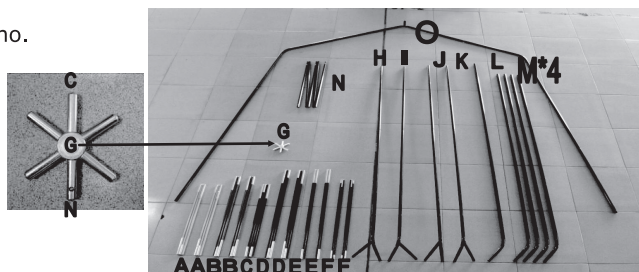

pic.1

**Center Tent Cabin**


1. Spread the inner tent out flat, floor side down.

Tie Metal center hub G to top of center cabin.

Assemble the five black fiberglass poles(C,D,E) insert into the sleeves on the top of the tent.

The upper ends of C,D,E insert into G (center hub), and the lower ends insert into steel poles H,I,J,K,L. Insert two grey fiberglass poles(B) into the sleeves and into steel poles H,I,J,K.(pic.2,3,4,5,6,7,8)


 
pic.3



pic.4



  pic.5

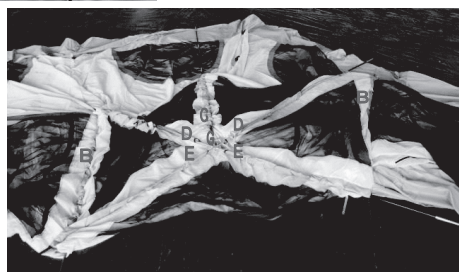

pic.2



pic.6



pic.7



pic.8

2. Insert the double prong steel poles ends (H,I,J,K,L) into the corresponding pin rings (center portion of the tent).(pic.9,10)

pic.9



pic.10

**Side Cabins Assembly**

3. Assemble the two yellow fiberglass poles(A). Insert into side pole sleeves.

Insert fiberglass into steel single prong upright poles (M).(pic.11)

Then insert the end of poles into the corresponding pin rings.(pic.13)

4. Place inner tent's S-hook to fasten on the plastic pipe hole.Clip the plastic hooks to the corresponding steel poles(M).(pic.12)


5. Tie the guy ropes on the center of two yellow fiberglass poles(A).Then pull the guy ropes and stake the guy ropes into the ground.(pic.14,15)

Fix the inner tent stakes into the rings on the corners of the tent to secure it to the ground.(pic.16,17)

pic.14



 pic.15

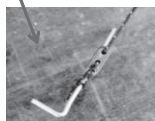

pic.11



pic.12

pic.13



pic.16



pic.17

**TENT ASSEMBLY INSTRUCTION**

Model-TGT-CARSON-18

6.To set up the front door of tent with the steel poles.(pic.18,19)



pic.19

pic.18

7.Place the fly over the tent. Wrap the Velcro fasteners of the fly around the fiberglass and steel poles.(pic.20,21)

8.Insert the front door steel poles into the corresponding pin rings.(pic.24,25)

9.Attach the fly to the tent by hooking the plastic S-hook on the fly corners to the rings at the tent corners.(pic.27,31)

10. Assemble the two shortest 6.9mm fiberglass poles (F) and insert into the sleeves on the side of the tent and the corresponding pin rings.(pic.22,23,24)

11. Fix the fly stakes into the rings on the corners of the tent to secure it to the ground.(pic.24,25,26,27)

Meanwhile, remove 2 guy ropes which were tied on the center of two yellow fiberglass poles(A).

12. Finally secure the tent in place with the guy ropes and extra tent stakes.(pic.28,29)

13. Tent assembled. Front side refer to pic.24. Back side refer to pic.30

pic.20



pic.21



pic.22




pic.23



pic.24

 pic.28




pic.29



pic.25



 pic.26



pic.27



pic.30



pic.31

## WARNING!

**KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This tent is made with flame-resistant fabric, which meets CPAI-84 specifications. **IT IS NOT FIRE PROOF!** The fabric will burn if let in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

### DANGER:

Stove, lanterns, candles, grills, heaters and other fuel burning devices produce carbon monoxide and will consume the available oxygen in this tent. Use of such devices in this tent will cause asphyxiation, carbon monoxide poisoning, and death or serious and permanent injuries. For this reason:

- DO NOT use fuel burning devices inside or near this tent.
- Your failure to follow this warning will cause death or serious and permanent injury to you or others using this tent.

### DO NOT...

- Pitch tent near open fire.
- Use candles, matches or open flames of any kind on or near a tent.
- Leave campfire unattended.
- Leave children unattended inside a tent.
- Use fuel-burning, oxygen-consuming devices (heaters, lanterns, cooking stoves or other flame sources) inside your tent.
- Build campfires upwind of a tent.
- Refuel lamps, heaters or stoves inside a tent.
- Smoke inside a tent.
- Store flammable liquids inside a tent.
- Use water repellent compounds on your tent other than those recommended for use on outdoor equipment.
- Spray the tent with insecticide.
- Store tent on concrete floor.

### DO...

- Always extinguish campfire before sleeping or leaving the area.
- Exercise care when using electricity and lighting in and near tents.
- Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
- Anchor your tent securely to provide additional security in changing conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
- Take your tent down and store properly after camping.

**DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY.** The sun's ultraviolet (UV) light degrades almost every fabric and material. If left in sunlight for prolonged periods of time, fabric will fade and weaken. UV damage is not covered by the manufacturer's warranty. Do not store tent on concrete floor.

Your tent is water repellent. However, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.



Model-TGT-CARSON-18

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the frame to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

### Two Year Warranty

This tent carries a two years manufacturer's warranty against defects in workmanship and materials. Should this tent become defective within two years of purchase, please contact us. You will be required to provide proof of purchase.

### What is not covered by the warranties:

Warranties DO NOT cover normal wear and tear, misuse, mildew and rotting caused by storage of a damp tent, or damaged and fading caused by prolonged exposure to UV rays.

## REPLACEMENT PARTS

For missing parts or broken poles, please call customer service at:

Website: Visit [www.tahoe gear.com](http://www.tahoe gear.com)

Toll Free: 855-TAHOE-20

(855-824-6320)

Email: [customerservice@tahoe gear.com](mailto:customerservice@tahoe gear.com)

TGT-CARSON-18 COMPONENT CHECK LIST	
ITEMS	QUANTITY
TENT BAG	1
POLE BAG	1
PEG BAG	1
OUTER TENT	1
INNER TENT	1
POLES	11
STEEL POLES	11
JOINT CONNECTOR	1
GUY ROPES	9
TENT STAKES	22